

## Untitled

### Switch between NTSC and PAL blindly

If your camera is configured in the wrong format (NTSC or PAL), maybe this will help.

I will refer to the camera in this manner, with the lens pointed toward you and the A/V jack pointed away from you, from top to bottom the buttons will be referred as "UP", "ENT", "DOWN" and vibration as "VIB".

- o Turn on the camera by pressing the UP button (Blue LED comes on and a VIB confirms the unit is on).
- o Plug into TV (Red and Blue LEDs come on).
- o Press and hold ENT until you get on short VIB.
- o Press the DOWN button 5 times (you will get a confirmation VIB for each scroll down)
- o Press the ENT button (a short VIB confirms you are into the NTSC / PAL selection mode)
- o Press either UP or DOWN one time (confirmed by one VIB)
- o Press ENT (one short VIB confirms the change from one to the other)
- o Press and hold the UP button to turn off the unit.

You should now be in the preferred mode.

Hope this helps!