

Instrukcja montażu Heat-sink


1. This heatsink comes with a thermal interface material.



2. Place the thermal interface material on CPU and Memory.



3. There is another thermal interface material on the heatsink. Please remove the film on it when you use this part.

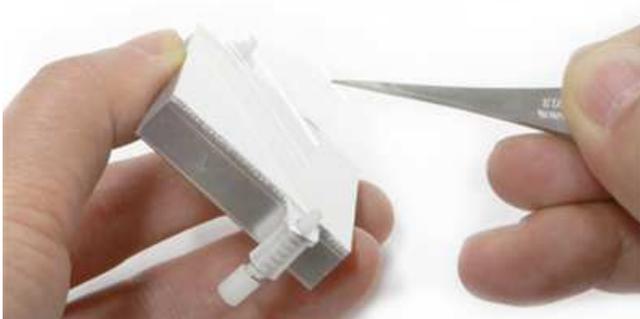

4. Mount it on the ODROID-C1.

